


Splitboard Crampons

Assembly and Use Instructions

Assembly:

1. Adjust Seam Pin Loop to have about .125" clearance to heelstay.
2. Tighten screw and nut with Phillips Screwdriver and crescent wrench.
3. Add rubber shims if required to make tight fit.

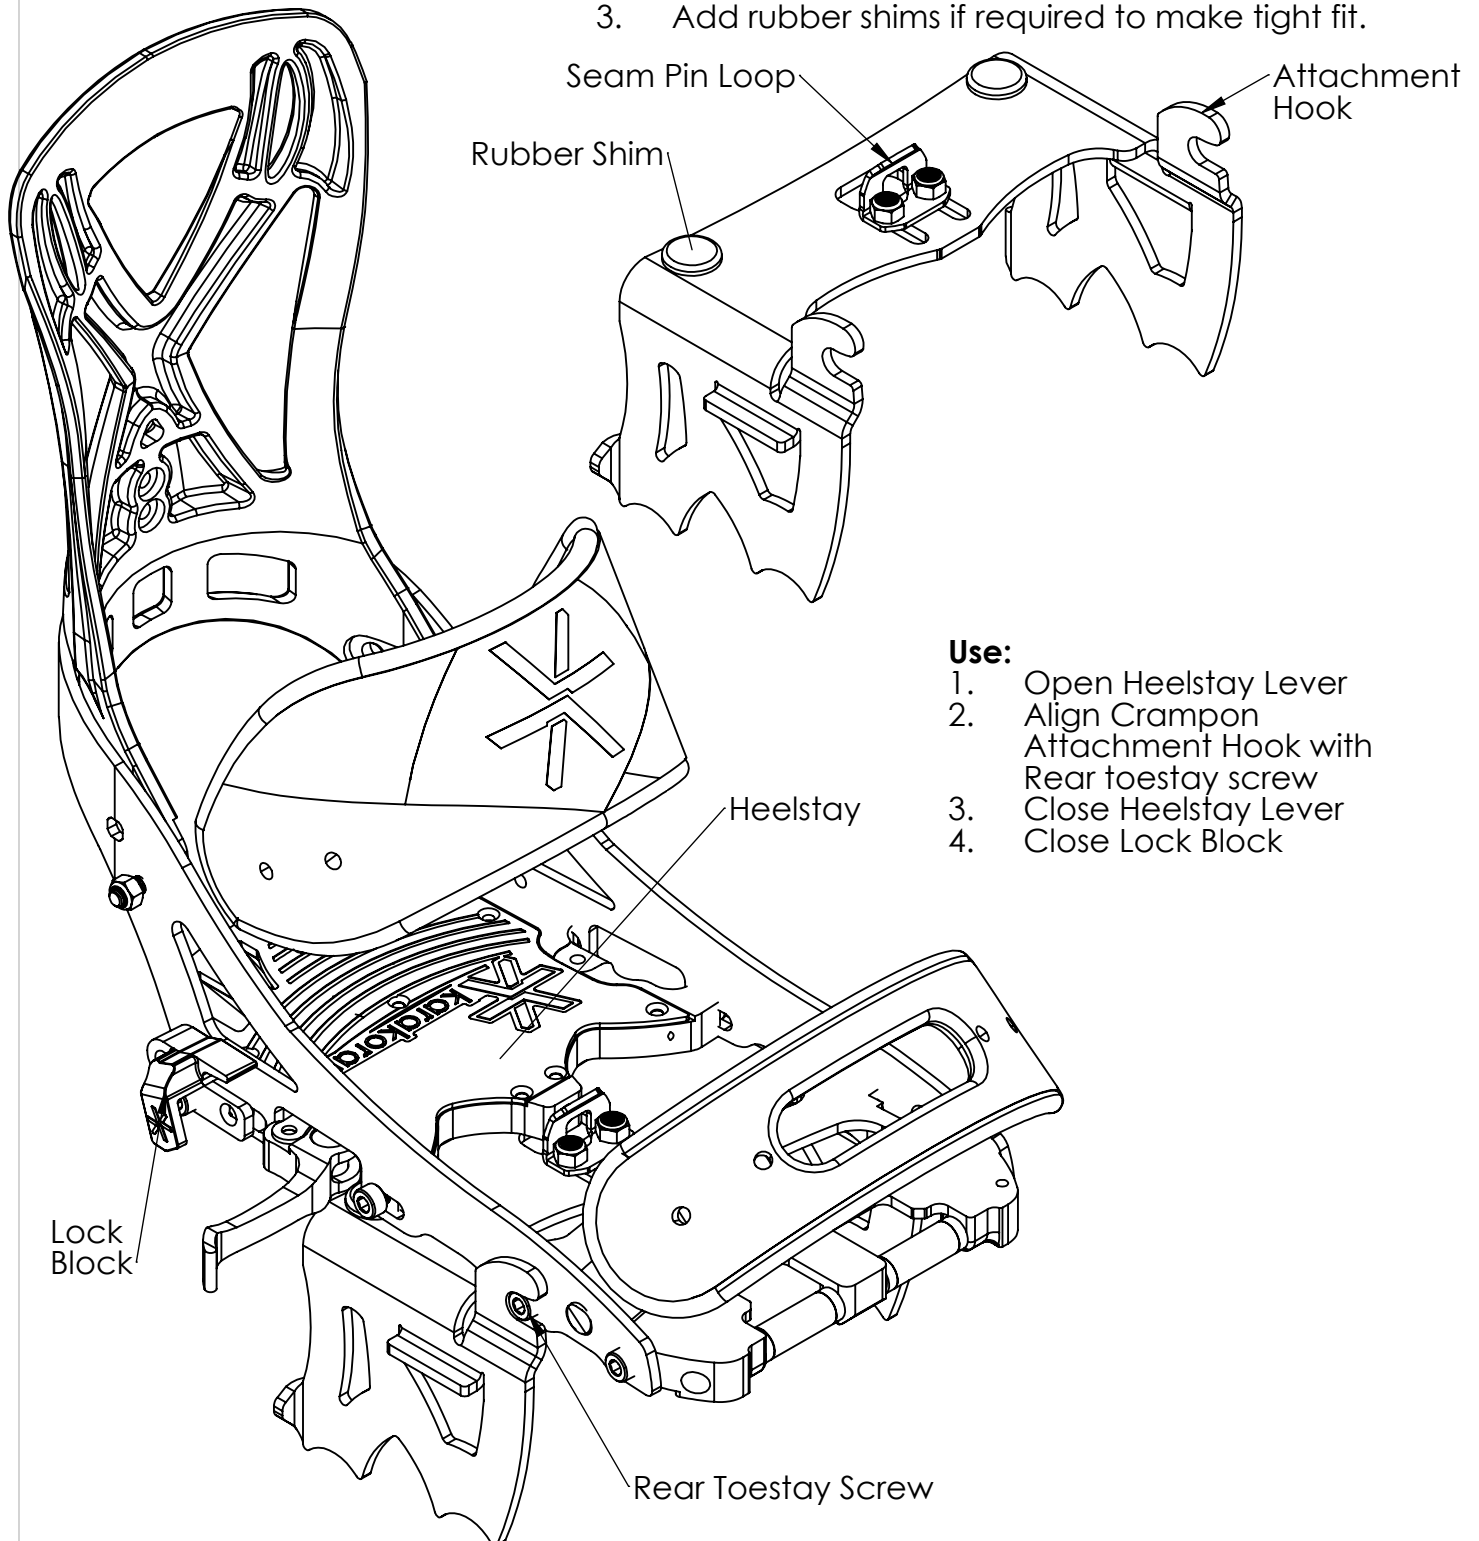

Use:

1. Open Heelstay Lever
2. Align Crampon Attachment Hook with Rear toestay screw
3. Close Heelstay Lever
4. Close Lock Block